

ODYSSEY[®]

BATTERY

Installation, Operation and Maintenance Manual



www.odysseybattery.com



EnerSys[®]
Power/Full Solutions

Table of Contents

I.	Introduction	3
II.	Why use AGM ² batteries?	3
III.	Safety	4
IV.	Getting started.....	4
	A. Installation.....	4
	B. Battery connections.....	5
	C. Battery cabling	6
	D. Torque specifications.....	6
V.	Technical details	8
	A. Operating temperature range.....	8
	B. Understanding state of charge	8
	C. Storage and self-discharge	8
	D. Battery life expectations.....	9
	E. Float applications.....	9
	F. Charging	10
	G. Parasitic loads	13
	H. Testing	13
	I. Maintenance.....	14
	J. Ventilation	15
	K. Winter storage	15
	L. Warranty considerations	15
VI.	Additional information	16
VII.	FAQs	16
VIII.	Definitions of acronyms.....	17



I. INTRODUCTION

ODYSSEY® batteries are manufactured by EnerSys using its unique Absorbed Glass Mat (AGM) Thin Plate Pure Lead (TPPL) technology to deliver twice the power and three times the life of conventional AGM batteries.

Bringing together the technologies incorporated into ODYSSEY batteries has integrated years of intelligence, research and development, resulting in the creation of the next generation of AGM - TPPL batteries. AGM² is a unique design of Valve Regulated Lead Acid (VRLA) batteries that combines three major technical advancements in one battery: super high-grade materials + refined chemical formula + TPPL technology. This sets AGM² batteries apart in terms of power, fast-charge acceptance, shelf life, durability and most of all exceptional value for your investment.

Throughout their design cycle life, AGM² batteries can provide engine cranking pulses of up to 2700 amps for five seconds at 77°F (25°C), while delivering over 400 charge/discharge cycles to 80% Depth of Discharge (DOD). This challenges all typical starting batteries, which are only designed for high current for short durations, to perform poorly when deeply discharged repeatedly.

Likewise, a typical deep cycle battery, which is designed to provide relatively low current for a long duration of time, cannot provide the high current bursts that are needed for starting applications.

AGM² technology allows one battery to provide both excellent cycling life and high-power capability for many applications. AGM² batteries excel in both starting and deep cycling without compromising lifespan or performance, making them an excellent choice for a wide range of applications such as heavy-duty trucks, recreational vehicles, marine, emergency power and much more.

II. WHY USE ODYSSEY® AGM² BATTERIES?

- Long service life – design life of 8-12 years in float applications and 3-10 years in non-float applications at 77°F (25°C).
- Fast charging – extremely low internal resistance allows high-current charging, which reduces charge time.
- Excellent cycle life – provide up to 900 cycles when discharged 50%.
- Low temperature performance – even at sub-zero temperatures down to -40°F (-40°C), battery performance allows for quick engine starts or deep discharges.
- Long shelf life – can be stored for up to two years at 77°F (25°C) and longer at lower temperatures.
- Deep discharge recovery – it is possible to recover a deeply discharged AGM² battery. There is more information on that process later in this manual. However, overall battery life will be affected.
- Maintenance-free – no need to add water to batteries.
- Superior vibration resistance – high compression design and high-strength plastic construction give these batteries extreme shock and vibration resistance.
- Mounting flexibility – can be mounted in any position except inverted/upside down in typical starting applications.
- Easy shipping – approved for shipment as non-hazardous cargo by the U.S. Department of Transportation.
- The management systems governing the manufacture of this product are IATF 16949, ISO 9001 and ISO 14001 certified.

III. SAFETY

Batteries can deliver a large amount of power, which can cause injury or death if not handled safely. Please follow these guidelines any time you are working around batteries.

- Personal protective equipment including gloves and safety glasses should be worn.
- Insulated tools should be used.
- Watches, bracelets or other metal objects should be removed.
- Do not place any objects on top of the battery.
- Make sure the charging system is set for AGM batteries and in line with advised charging specifications.
- Do not charge batteries if the temperature is above 104°F (40°C).

IV. GETTING STARTED

A. INSTALLATION

ODYSSEY® AGM² batteries are shipped from the factory at a full State of Charge (SOC) and should be ready for installation out of the box. In typical starting applications, measure the battery's voltage; if it is 12.65 volts or higher, the battery can be installed. If the voltage is lower than 12.65 volts, the battery should be charged. Multiple battery configurations should be matched voltage. Refer to the Charging section in this manual if needed.

To replace an existing battery, follow the steps below:

1. Be sure to wear the appropriate personal protective equipment.
2. Note the orientation of the existing battery's positive and negative terminals.
3. Disconnect the cables, negative first, from the old battery following vehicle manufacturer guidelines if applicable. The old battery should be returned to a battery dealer for proper recycling.
4. Inspect the battery cables for corrosion, acid damage or insulation deterioration and replace if needed.
5. Position the new ODYSSEY AGM² battery in the battery tray and secure it properly to the vehicle – height adapters may be needed and are available for some sizes.
6. Connect the positive cable from the ignition to the Positive (+) terminal of the battery.
7. Connect the negative cable from the ignition or chassis to the Negative (-) terminal of the battery.
8. Properly torque the connection per the specification in Table 2 on page 6.

The steps above apply to a single, 12-volt battery. There are other applications that may require batteries to be connected in parallel or series. It is important to take note of the battery's required configuration before the existing batteries are removed. If there is any question about the battery configuration, refer to the documentation that was supplied with the device being powered. ODYSSEY AGM² batteries can be installed on their side or end if needed due to space constraints.

NOTE: This is a valve regulated sealed battery and never needs to have water or electrolyte (acid) added. Warranty will be void if opened!

ANY OF THE FOLLOWING WILL VOID THE WARRANTY ON YOUR ODYSSEY® BATTERY:

- REMOVING THE LABELED COVER
- REMOVING OR DESTROYING THE BATTERY'S DATE CODE

ODYSSEY® EXTREME BATTERY WARNING – DO NOT USE ANY TYPE OF OIL, ORGANIC SOLVENT, ALCOHOL, DETERGENT, STRONG ACIDS, STRONG ALKALIS, PETROLEUM-BASED SOLVENT OR AMMONIA SOLUTION TO CLEAN THE BATTERY COVERS AND BATTERY TOPS. THESE MATERIALS MAY CAUSE PERMANENT DAMAGE TO THE BATTERY COVERS AND BATTERY TOPS AND WILL VOID THE WARRANTY.

ODYSSEY® PERFORMANCE BATTERY WARNING – PROLONGED EXPOSURE AND OR IMMERSION INTO ANY TYPE OF OIL, ORGANIC SOLVENT, ALCOHOL, DETERGENT, STRONG ACIDS, STRONG ALKALIS, PETROLEUM-BASED SOLVENT OR AMMONIA SOLUTION TO CLEAN THE BATTERY COVERS AND BATTERY TOPS MAY CAUSE PERMANENT DAMAGE TO THE BATTERY COVERS AND BATTERY TOPS AND WILL VOID THE WARRANTY.

DO NOT SHORT CIRCUIT YOUR ODYSSEY® BATTERY'S TERMINALS!


Remove any metallic items such as watches, bracelets and other personal jewelry.

B. BATTERY CONNECTIONS

Here are some general guidelines regarding different types of battery connections:


- Series connections are used to increase battery voltage by connecting the positive terminal of one battery to the negative battery of another battery. In this configuration, the overall capacity of the battery is equal to the capacity of one battery. Series systems are wired as shown in Battery Sketch 1.

PLEASE NOTE: When replacing multiple batteries, each battery should be of a similar SOC.

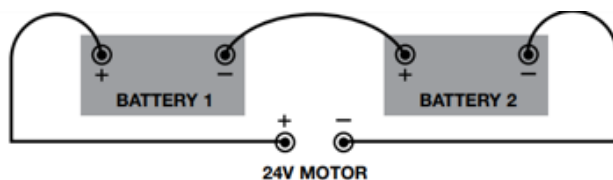

Battery Sketch 1

- Parallel connections are used to increase the battery capacity by connecting the positive terminal of one battery to the positive terminal of a second battery. Likewise, the negative terminals are connected. In this configuration, the system voltage is the voltage of one battery. Parallel systems are wired as shown Battery Sketch 2:

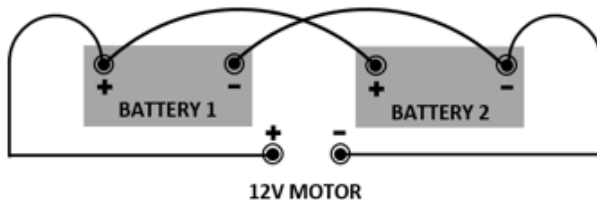

Battery Sketch 2

C. BATTERY CABLING

Since battery cables are the connection between the battery, the charging system and the device being powered, it is important that they are properly installed. Improperly installed cables can result in poor battery performance, terminal damage or even fire. Cables should be sized based on the amount of current they are expected to carry in the application. Refer to Table 1 for cable current ratings according to NEC Table 310.15(B)16 for copper cables rated at 167°F (75°C). If it is necessary for a cable to be longer than six feet, a heavier gauge wire should be considered to avoid excessive voltage drop.

AWG	mm2	Amps
14	2.5	20
12	4	25
10	6	35
8	10	50
6	16	65
4	25	85
2	35	115
1	50	130
1/0	55	150
2/0	70	175
4/0	120	230

Table 1

D. TORQUE SPECIFICATIONS


Each terminal type has a different torque specification. Under-tightening of connections can lead to short circuit and electrical damage. Over-tightening can cause physical damage to the battery terminal. Refer to Table 2 below for the recommended torque specification based on the terminal type.

Terminal Type	Details	Maximum Torque [in-pounds]	Maximum Torque [Nm]
Stud 3/8-16" HD	All G31, Marine and 8D	200	22.6
Stud 3/8-16"	ODS-AGM6M	100	11.3
Stud 5/16-18"	All Marine	100	11.3
Side Terminal 3/8-16" Receptacle	G75 G78	60	6.8
M4 Receptacle	ODS-AGM8E (PC310)	8.9	1
M6 Receptacle	ODS-AGM16CL	40	4.5
M6 Receptacle	ODS-AGM14,15L, 16L, 20L, 30L	50	5.6
M6 Receptacle	ODS-AGM28*, 42*, 70*	60	6.8
M6 Stud	ODS-AGM30E, 40E	35	3.9
M6 Stud	ODS-AGM066FT, 225FT	60	6.8
M6 Stud	ODS-AGM420FT	88	9.9
Stud 3/8-16"	ODS-AGM470FT	88	9.9


* For SAE torque specification refer to vehicle manufacturer's specification.

Table 2

ODYSSEY® EXTREME BATTERIES

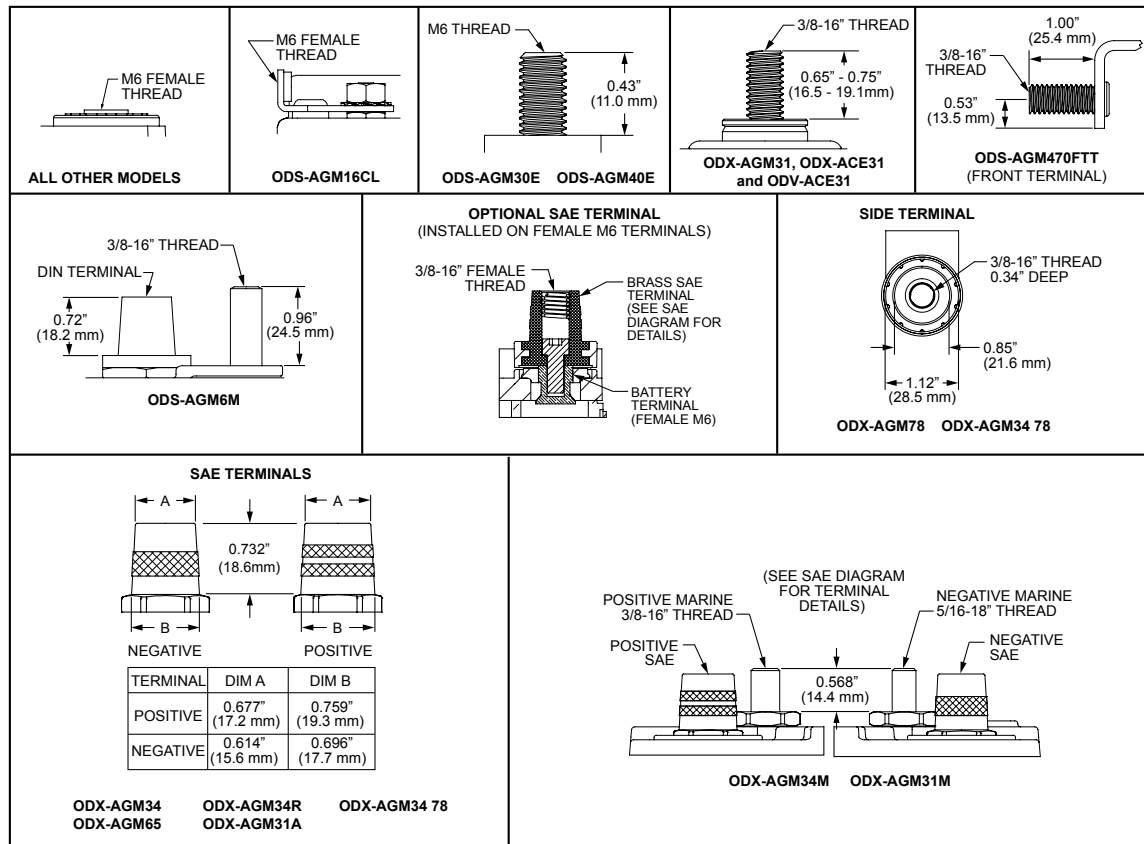

ODYSSEY® PERFORMANCE BATTERIES

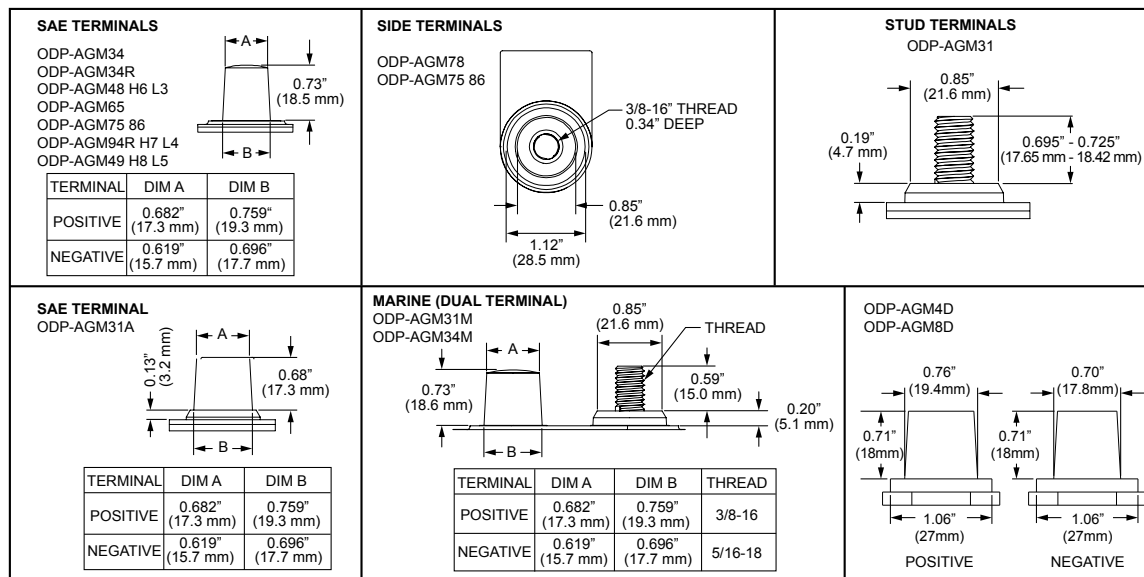

V. TECHNICAL DETAILS

A. OPERATING TEMPERATURE RANGE

Temperature impacts the life and performance of AGM² batteries, as it does all batteries. In general, higher temperatures reduce battery life while lower temperatures reduce the available capacity that a battery can provide. Refer to Table 3 below for the operating temperature range for each model.

Battery Model		Maximum Operating Temperature Range
ODP	All models	-40°F (-40°C) to 140°F (60°C)
	Except ODP-AGMDIN sizes (with or without ODYSSEY® Connect battery monitoring system)	-40°F (-40°C) to 113°F (45°C)
ODX/ODV	All models	-40°F (-40°C) to 176°F (80°C)
ODS	Powersports (without metal jacket)	-40°F (-40°C) to 113°F (45°C)
	Powersports (with metal jacket)	-40°F (-40°C) to 176°F (80°C)
	Marine and RV	-40°F (-40°C) to 104°F (40°C)

Table 3

B. UNDERSTANDING STATE OF CHARGE

Like all batteries, it is best that AGM² batteries be kept at a high SOC. It is important to understand how to determine the SOC of AGM² batteries correctly. The approximate SOC value is found by measuring the battery's Open Circuit Voltage (OCV) with a high-quality voltmeter. The voltage reading must be taken at least four hours after the battery finishes charging or at least 30 minutes after it finishes a discharge. Measurements will not be accurate if adequate rest time is not allowed. Table 4 shows the typical relationship between OCV and SOC.

SOC	OCV
100%	12.9
75%	12.6
50%	12.2
25%	11.9
0%	11.5

Table 4

C. STORAGE AND SELF-DISCHARGE

Even if batteries are not installed in an application and are being stored, their SOC declines over time. The rate at which a battery loses charge depends on the temperature. The warmer the temperature the shorter the storage time before a freshening charge is required. Cooler temperatures slow down the rate of self-discharge. A good rule of thumb to use is that for every 18°F (10°C) rise in temperature the storage time is cut in half. This means that the storage time at 95°F (35°C) is half the storage time at 77°F (25°C).

Storage Temperature	Storage Time (Months)
41°F (5°C)	48
59°F (15°C)	36
77°F (25°C)	24
95°F (35°C)	12
113°F (45°C)	6

Table 5

If stored at 77°F (25°C) or lower, ODYSSEY® AGM² batteries should be given a freshening charge at least once every two years or when the OCV drops to about 12.2 volts, whichever comes first.

This OCV corresponds to a SOC of about 50%. Batteries should always be fully charged before they are stored. The warmer the temperature the more frequently OCV should be monitored. Table 5 shows how temperature impacts the rate of self-discharge.

D. BATTERY LIFE EXPECTATIONS

Cycling Applications and Depth of Discharge (DOD)

Applications in which the battery is frequently discharged and recharged are called cyclic. A complete cycle starts with a charged battery that is discharged and then brought back to a full charge. Design battery life in these applications is stated as the number of cycles the battery will deliver before its capacity drops to 80% of its rated value. For example, suppose a battery is rated at 100 amp hours (Ah) and has a published cycle life of 400. This means that the battery can be cycled 400 times before its delivered capacity drops to 80Ah.

DOD is one of the main factors that determines how many cycles a battery can provide. The DOD is simply the ratio of capacity extracted from the battery to its rated capacity expressed as a percentage. If a 100Ah battery delivers 65Ah and is then recharged, it is said to have delivered a 65% DOD cycle.

The general relationship between DOD and number of cycles is shown below in Figure 1. Higher DODs result in shorter cycle life.

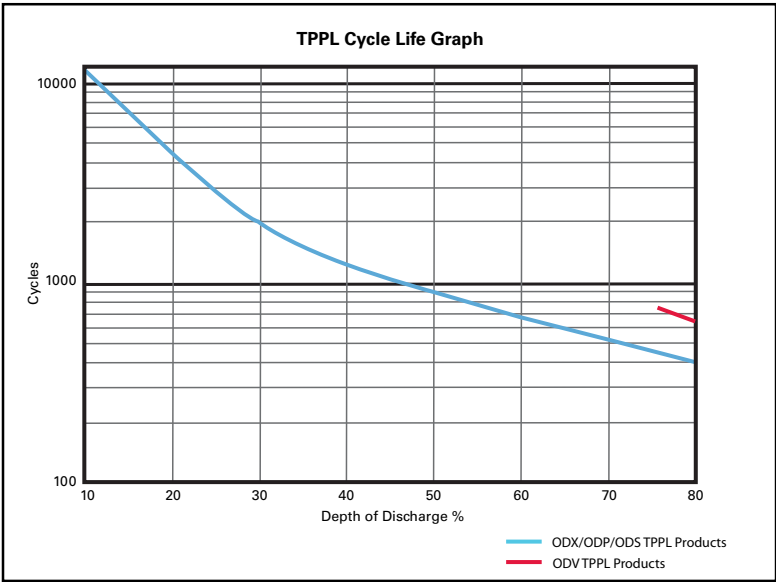


Figure 1
*Data based on laboratory testing. ODV testing is in process for rates other than 80% DoD.

E. FLOAT APPLICATIONS

Batteries that are primarily used as a source of backup or emergency power are not frequently cycled. The life of these types of applications is referred to as float life. Emergency lighting, security alarms and Uninterruptible Power Supply (UPS) are good examples of batteries in float applications. In each of these applications the battery is discharged only if the main utility power is lost; otherwise the battery remains on continuous float or trickle charge.

Since ODYSSEY® AGM² batteries are dual purpose by design, they offer a long-life battery option in float applications. At room temperature (77°F (25°C)), these batteries have a design life of 10+ years in float applications. At end of life, an AGM² battery will still deliver 80% of its rated capacity.

F CHARGING

The relationship between cycle life and DOD shown in Figure 1 holds only if the battery is properly charged after each discharge. This means that each time the battery is discharged, between 103-105% of the discharged amp hours should be returned. For example, if 100 amp-hours were discharged from the battery between 103-105 amp-hours must be returned to the battery for a full recharge. Failure to do so (over or under charging) will result in a loss of cycle life and ultimately a loss of capacity. There are several ways to recharge batteries and the best way depends on how the battery is being used.

Charging with an Alternator

When used in starting applications, ODYSSEY® AGM² 12-volt batteries will be charged on-board with a standard automotive alternator that generates anywhere between 14.2-14.5 volts at 77°F (25°C). We recommend a temperature compensation of the charge voltage at ± 18 mv per battery per °C variation in temperature from 25°C. The warmer the temperature the lower the charge voltage and the cooler the temperature the higher the charge voltage.

Charging with an A/C Powered Charger

When used in cycling or stand-by power applications, an A/C powered charger can be used to recharge ODYSSEY AGM² batteries. There are two main types of A/C powered battery chargers on the market: full recharging ability or maintaining a full SOC.

In order to recharge a battery that has been discharged, it is best to use an automatic charger with an AGM setting that has the appropriate charge voltage and current per recommendations. For optimum charging, the current output should be at least 40% of the battery's C10 rating. This means a battery that has a 10-hour rating of 100 amp hours should be charged with 40 amps. Charge current should never be less than 10% of the battery's C10 rating. Voltages higher than 15.0 volts will cause irreversible damage to the battery. Please refer to Figure 2 below for a graphical representation of the recommended charge profile for ODYSSEY AGM² batteries used in non-starting applications.

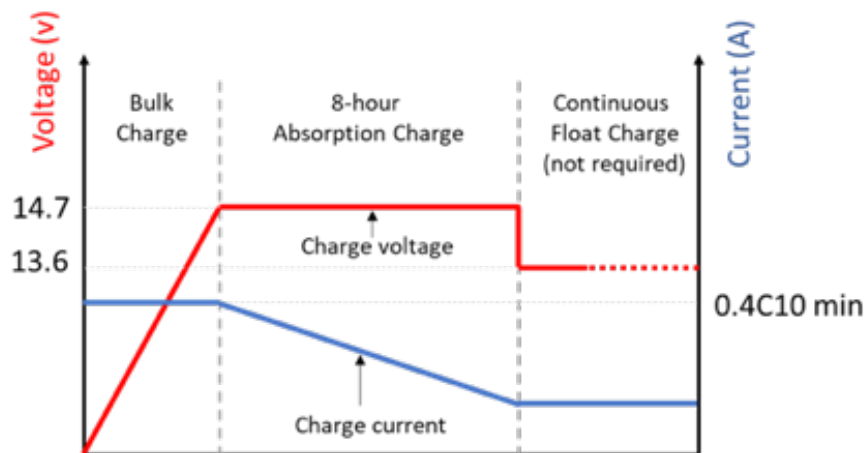


Figure 2

Chargers that are designed for maintaining a full SOC are often called “float” or “trickle” chargers and generally supply current in the 0.5 amp to 1.5 amp range. These chargers might also be called maintenance chargers and are often used to maintain batteries that are used in seasonal applications such as boats or RVs. These chargers are not suitable for recharging ODYSSEY AGM² batteries that have been deeply discharged. However, they are suitable for maintaining batteries at a full SOC, provided the float voltage setting is appropriate. The

recommended float voltage for ODYSSEY AGM² batteries is 13.6 volts for a 12-volt battery at 77°F (25°C).

There are also chargers available that charge using constant current. These chargers do not have multiple charge phases as shown in Figure 2. They simply supply current to the battery, which causes the battery voltage to rise. Once the battery voltage reaches the setpoint for a fully charged battery, the charging will terminate. How long it takes to charge a battery with this method depends on how deeply the battery is discharged and how much current the charger provides. See Table 6 below as an example of recharging a battery rated at 100Ah from various depths of discharge using a 10-amp constant current charger.

Open Circuit Voltage	Depth of Discharge	Charge Time (hours)
12.6	25%	4
12.2	50%	8
11.9	75%	12
11.5	0%	16

Table 6

Temperature Compensation of Charge Voltages

Proper charging of all AGM² batteries requires temperature compensation of the charge voltage. This is especially true in float applications where the batteries are on-charge constantly. The temperature compensation coefficient is approximately ±18 mV per °C variation from 25°C per 12-volt battery. Temperature and charge voltage are inversely related. Therefore, charge voltage must be reduced as temperatures increase and charge voltage must be increased as temperatures decrease. Regardless of temperature, the minimum charge voltage is 13.2 volts as lower voltages will damage the battery grids and shorten life.

Recovering a Severely Discharged Battery

Many commercially available chargers must detect a certain minimum voltage for the charging process to start. This is a common safety feature to prevent using a 12-volt charger on a 6-volt battery. Chargers of this type are unable to charge a battery that has been severely over-discharged. For example, a 12-volt charger might not start the charging process if the battery connected to it has an OCV of 5 volts. Depending on the size of the battery, there are two ways to try to recover the battery.

- For batteries used in starting applications, the alternator can be used to recharge the battery after jump-starting the battery to start the vehicle.
- For batteries not used in starting applications, a second battery that is known to be at a high SOC can be connected to the discharged battery in parallel. Refer to Section IV, B (Battery Sketch 2) for details related to connecting batteries in parallel. Once the low battery’s voltage reaches 11.5 volts, the batteries can be disconnected from each other. The standard A/C charger normally used by the system can then be connected to the battery that needs to be charged. Please refer to “Procedure to Recover Deeply Discharged ODYSSEY Batteries” found on www.odysseybattery.com for more details.

It is important to understand why the battery became over-discharged, so the situation does not happen again. The most common reasons for batteries to be over-discharged are system issues related to parasitic loads (see page 13) or malfunctioning/non-existent low voltage disconnect equipment.

Unfortunately, this recovery process is not always successful. When batteries are severely discharged, sulfation develops and can be very difficult to remove depending on how deeply the batteries are discharged and how long they have been in that state. This condition is not warrantable since it is the result of abuse or neglect in the application, rather than a manufacturing defect.


Racing Vehicles Using Total Loss (No Alternator)

Standard automotive type chargers are not designed to return 105-108% of the energy removed. They normally boost charge to 80-95% and expect the alternator to complete the charge. EnerSys® recommends using chargers that provide 105-108% recharge before switching to storage charge. Chargers approved by EnerSys are listed on www.odysseybattery.com.

To fully charge an ODX-AGM31 and ODP-AGM31 battery that are routinely discharged deeply, a minimum of 40 amps are required with charger voltage within the range of 14.1 volts to 14.7 volts. It is imperative not to exceed 15.0V as this will cause the pressure valves to open and out-gas hydrogen, oxygen and water from inside the battery. This will shorten the life of the battery and cause premature failure. Some portable chargers exceed 15.0 volts, especially two-wheel garage chargers, so charging voltages should be verified by measuring the charging voltage during the time when the charging amperage is reducing from full output. The deep cycle charging voltage must be within 14.1 volts minimum to 14.7 volts maximum.

If a standard automotive charger is used to boost charge a discharged battery because of an accessory left on, it is important to make sure the charging voltage does not exceed 15.0 volts during charge. A hand held voltmeter can be used to monitor this periodically.


12V Parallel Connection

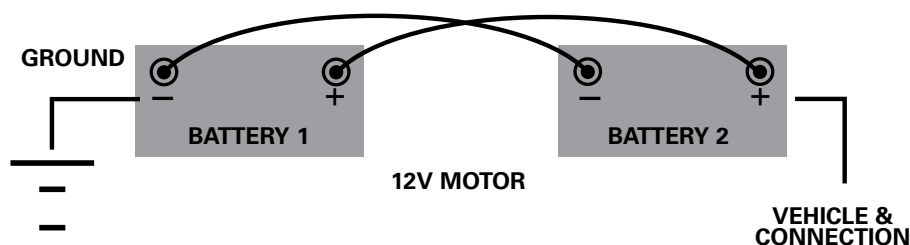

Battery Sketch 3

24V Series Connection


To power a 24-volt trolling motor, you will need to connect two ODYSSEY® batteries in a series. As shown in Battery Sketch 4, the negative of Battery 1 is wired to the positive of Battery 2. Hook up the positive terminal of Battery 1 to the positive terminal of your trolling motor and the negative terminal of Battery 2 to the negative terminal of the trolling motor.

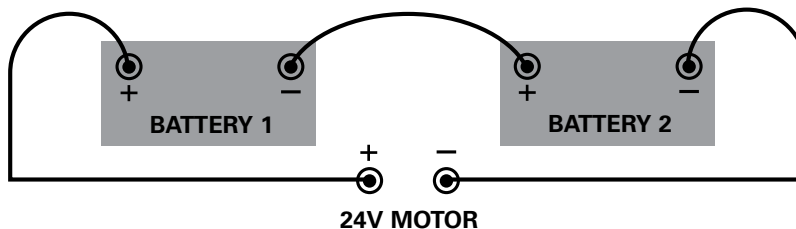

Battery Sketch 4

36V Series Connection

To power a 36-volt trolling motor, you will need to connect three ODYSSEY batteries in series. As shown in Battery Sketch 5, the negative of Battery 1 is wired to the positive of Battery 2; the negative of Battery 2 is then connected to the positive of Battery 3. Finally, hook up the positive terminal of Battery 1 to the positive terminal of your trolling motor and the negative terminal of Battery 3 to the negative terminal of the trolling motor.

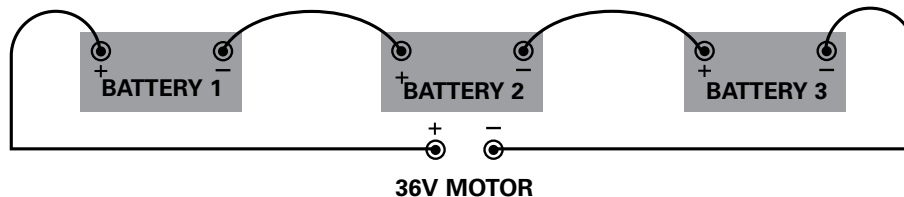

Battery Sketch 5

G. PARASITIC LOADS

In many cases batteries that are apparently at rest may be supplying a small amount of current to connected equipment such as radios, clocks and security systems, to name just a few examples. Today's vehicles have multiple on-board electronics that require small amounts of power. These small currents are collectively referred to as parasitic loads and may be detrimental to the life of a battery if they are not accounted for in the design of the system.

Over time these small loads – typically tens of milliamps (mA) – will consume significant amp hours, which results in the battery voltage decreasing. Consider a boat that has a parasitic draw of 20mA and is docked for five months with the battery connected to the load. In that 150-day period that parasitic load will consume more than 70 amp hours.

There are three ways to ensure that batteries are not being drained by parasitic loads in the system.

1. Physically disconnect the battery from the load after fully charging it. A master disconnect switch is also an effective countermeasure.
2. Periodically give the battery a freshening charge, using the charging guidelines outlined on page 10.
3. Connect a trickle charger for AGM batteries when the battery is stored, using the charging guidelines outlined on page 10.

H. TESTING

There are several different ways to test AGM² batteries. Depending on the time and equipment available, one may choose to perform either a capacity test, a ½ Cold Cranking Amps (CCA) Load Test or a Conductance Test. These options should help determine whether the battery returned by the customer has reached its end of life or simply needs a full recharge. For all methods, the battery should be fully-charged before testing. The following includes details related to each test method:

RECOMMENDATION: Testing should be completed on a clean/main battery terminal surface, not a steel stud. Testing batteries individually in multiple battery situations is best. At minimum, each battery must be disconnected at one terminal (the same polarity).

1. **Capacity Testing:** This method tests the performance of the battery based on its Reserve Capacity (RC) rating, which means the test may be more time consuming, however it is the

preferred test method for a state of health check. The equipment needed to perform this type of testing is called a discharger tester. The battery should be fully charged before using this test method. Discharge testers are designed to apply a constant current load to a fully-charged battery until the battery voltage reaches 1.75 volts per cell (10.5 volts per battery) or other appropriate end point voltage in line with published performance tables, which is 100% discharged. The length of time the discharge tester runs until 1.75 volts per cell is reached should be compared to the battery's rated RC. Batteries that do not provide at least 80% of their rated runtime are considered failed.

2. **½CCA Load Test:** This method tests the performance of the battery based on its CCA rating and is much faster than capacity testing. The equipment needed to perform this type of test is called a ½CCA load tester. For accurate testing, the battery must be at least 75% charged, which for AGM² batteries means having an OCV of 12.6 volts or higher.

To perform the test, the CCA rating of the battery must be programmed into the tester. These testers apply half of the battery's CCA rating to the battery for 15 seconds. After 15 seconds, the battery voltage should be above 9.6 volts if the temperature is 70°F (21°C) or warmer; voltage below 9.6 indicates a failed battery. For temperatures below 70°F (21°C), refer to Table 7 on the next page for voltage. Most of these testers will specify whether the battery passed or failed the test. This can be an ideal test for batteries used in starter applications.

Temperature	End of Test Voltage
70°F (21°C)	9.60
60°F (16°C)	9.50
50°F (10°C)	9.40
40°F (5°C)	9.30
30°F (-1°C)	9.10
20°F (-7°C)	8.90
10°F (-12°C)	8.70
0°F (-18°C)	8.50

Table 7

3. **Conductance Test:** This method tests the performance of the battery based on its level of conductance. This is a fast test and is generally the type of test that will be used by auto parts shops. The equipment needed to perform this type of test is a hand-held electronic battery tester. There are a variety of hand-held testers on the market and most allow the user to program key battery parameters such as CCA and battery type. If the tester has an option for AGM², it should be used, otherwise AGM is suitable. Like the ½CCA Load Test, the AGM² battery should have an OCV of 12.6 volts or higher before testing. After the electronic testing is complete, the tester will indicate whether the battery passed or failed.

I. MAINTENANCE

ODYSSEY® AGM² batteries are very different from standard flooded batteries that are openly vented. These batteries operate as a sealed battery, which depend on internal recombination of battery gasses under normal operating conditions. This means that there should be minimal corrosion of terminals or any part of the surrounding area. In the event that corrosion is present, it is best to clean it off thoroughly by using a wire brush on any metal surfaces, and a wet rag anywhere else where there are residual substances. It is always recommended to use rubber gloves when cleaning a battery. Do not use chemicals to clean a battery, as some can damage to the plastic of the battery. There is no need to add water to the batteries. Opening the battery cover causes damage to the battery and voids any warranty.

PLEASE NOTE: Perform periodic inspection for case damage, loose battery hold downs, loose connections, corrosion and container swelling.

J. VENTILATION

ODYSSEY® AGM² batteries are part of a broader category of lead acid batteries called VRLA. This type of battery depends on the internal recombination of battery gasses for proper operation. The internal valve allows for nearly 100% recombination of gasses, which means there is no need to periodically add water.

WARNING: Any battery producing an odor or visibly venting should be removed from service. Physically disconnect only after the area has been ventilated.

The high recombination efficiency of ODYSSEY AGM² batteries makes them safe for installation in human environments. It is not uncommon to see these batteries in aircraft, hospital operating rooms and computer rooms. The only requirement is that these batteries must not be stored, operated or charged in a sealed or gastight enclosure. However, local regulations regarding ventilation must also be followed.

K. Winter Storage

The ODYSSEY battery does not lose its charged energy during cold storage temperatures, so there is no need to trickle or float charge during winter months. To store off-season, measure the battery voltage to make sure it is fully charged, 12.84 volts or greater; recharge if necessary. Disconnect the negative battery cable to prevent any applied electrical load during storage. The ODYSSEY battery cannot freeze down to -40°F (-40°C), so it can be left in the vehicle. It can be stored for two years or more below 77°F (25°C). Charging is required at two years or 12.2 volts, whichever comes first.

A 12-volt trickle charger can also be left connected to the battery if it is kept in storage for extended periods or if the battery is subject to parasitic loads during storage. The trickle charge voltage measured at the battery terminals must be between 13.5 volts and 13.8 volts. It is recommended to use the ODYSSEY battery charger for your battery. Additional information on ODYSSEY battery chargers, where to buy ODYSSEY battery chargers and ODYSSEY battery charging in general can be found at www.odysseybattery.com.

L. WARRANTY CONSIDERATIONS

ODYSSEY AGM² batteries are covered by warranty against defects in material and workmanship for at least two years. Some models and applications are covered for longer. Please note that the following actions will void any warranty coverage:

- Removing the labeled cover
- Removing or altering the battery's date code/serial number
- Removing or altering the battery terminal(s)
- Opening the battery case

The complete warranty statement can be found on our website, www.odysseybattery.com, for more details.

VI. ADDITIONAL INFORMATION

Should you need additional information, please contact your local Sales Representative or battery supplier. Our Technical Support group is also available by phone at +1-800-964-2837 and by submitting a Technical Inquiry through the Contact Us link on our website.

VII. FAQs

Are ODYSSEY® AGM² batteries the same as Gel batteries?

No, these are not Gel batteries. These are absorbed electrolyte batteries, which means there is no free acid inside the battery; all the acid is absorbed in the glass mat separators. These separators serve to keep the positive and negative plates apart. In Gel batteries, the electrolyte is in a gel form.

What is the Ah rating?

The ampere hour (Ah) rating defines the capacity of a battery. A battery rated at 100Ah at the 10-hour rate of discharge will deliver 10A for 10 hours before the terminal voltage drops to a standard value such as 10.5 volts for a 12-volt battery.

Does mishandling the battery void the warranty?

The warranty applies to manufacturing defects and workmanship issues and does not cover damages caused by customer mishandling.

What is the CCA rating?

Per SAE standard, the Cold Cranking Ampere (CCA) rating is the number of amperes a battery can deliver for 30 seconds at a temperature of 0°F (-18°C) before the voltage drops to 1.2 volts per cell or 7.2 volts for a 12-volt battery. A 12-volt battery that has a rating of 550 CCA will deliver 550 amps for 30 seconds at 0°F (-18°C) before the voltage falls to 7.20.

What is the MCA rating?

The Marine Cranking Ampere (MCA) rating refers to the number of amperes a battery can deliver for 30 seconds at a temperature of 32°F (0°C) until the battery voltage drops to 7.20 for a 12-volt battery. A 12-volt battery that has an MCA rating of 725 will deliver 725 amperes for 30 seconds at 32°F (0°C) before the voltage falls to 7.20. The MCA is sometimes called the cranking amperes or CA.

What is the HCA rating?

The abbreviation HCA stands for Hot Cranking Amps. It is the same as MCA, CA or CCA, except that the temperature at which the test is conducted is 80°F (26.7°C).

What is the PHCA rating?

Unlike CCA and MCA, the Pulse Hot Cranking Ampere (PHCA) rating does not have an “official” definition; however, it is suggested that for true automotive and marine purposes, a 30-second discharge is unrealistic. The PHCA, a short duration (about 3-5 seconds) high rate discharge, is more realistic. Because the discharge is for such a short time, it is more like a pulse. The low impedance of ODYSSEY battery technology allows them to maintain a higher voltage for more starter pulses, resulting in less heating of starter motors and cables. Higher power output results in a faster start.

What is impedance?

The impedance of a battery is a measure of its internal resistance. The lower the battery impedance the more the available power. The impedance of ODYSSEY® AGM² batteries is considerably lower than that of a conventional automotive or marine battery. The high rate discharge capability of ODYSSEY AGM² automotive and marine batteries is significantly higher than that of conventional automotive and marine batteries.

What is Reserve Capacity (RC) rating?

The RC of a battery is the number of minutes it can support a 25-ampere load at 80°F (27°C) before its voltage drops to 10.50 for a 12-volt battery. A 12-volt battery with a reserve capacity rating of 100 will deliver 25 amps for 100 minutes at 80°F (27°C) before its voltage drops to 10.5.

What is the short-circuit current of these batteries?

Typically thousands of amps. As mentioned before, the AGM² batteries have a very low internal resistance, which means that the short circuit current is very high. Precautions should be taken to avoid short circuits as equipment and battery damage will occur.

What is the operating temperature range of these batteries?

The operating range varies based on the battery type. Refer to Table 3 on page 8 for details.

Is the battery ruined if it is dropped?

It is possible to damage the internal connections as well as the external container, leading to a damaged battery. Batteries with visible external damage should not be used. Dropped batteries should be tested prior to use.

VIII. DEFINITIONS OF ACRONYMS

AGM – Absorbed Glass Mat battery. This is a type of VRLA battery in which all the electrolyte in the battery is absorbed into the glass mat separator material.

Ah – Ampere Hour. The ampere hour (Ah) rating defines the capacity of a battery.

CCA – Cold Cranking Ampere. Per SAE standard, this rating is the number of amperes a battery can deliver for 30 seconds at a temperature of 0°F (-18°C) before the voltage drops to 1.2 volts per cell or 7.2 volts for a 12-volt battery.

DOD – Depth of Discharge. This is the measure of how many amp hours were taken out of a battery compared to the battery's rating. For example, a 100 amp-hour battery, which has 40 amp-hours removed during discharge is said to be at 40% DOD.

HCA – Hot Cranking Amps. This rating refers to the number of amperes a battery can deliver for 30 seconds at a temperature of 80°F (26.7°C) until the battery voltage drops to 1.2v per cell or 7.2v for a 12-volt battery.

MCA – Marine Cranking Ampere. This rating refers to the number of amperes a battery can deliver for 30 seconds at a temperature of 32°F (0°C) until the battery voltage drops to 1.2v per cell or 7.2v for a 12-volt battery.

OCV – Open Circuit Voltage. This is a voltage reading obtained from a battery that is currently not charging or discharging. To get an accurate OCV on AGM² batteries, it is important to wait at least four hours after charging or 30 minutes after discharging to take the voltage reading.

PHCA – Pulse Hot Cranking Ampere. This rating does not have an "official" definition; however, it is suggested that for true automotive and marine purposes, a 30-second discharge is unrealistic. PHCA represents the number of amperes a battery can deliver for 5 seconds (more realistic crank time) at a temperature of 80°F (26.7°C) until the battery voltage drops to 1.2v per cell or 7.2v for a 12-volt battery.

RC – Reserve Capacity. The RC of a battery is the number of minutes it can support a 25-amp load at 80°F (27°C) before its voltage drops to 10.50 for a 12-volt battery.

SOC – State of Charge. The level of charge of a battery. It can be approximated by evaluating the battery's OCV.

TPPL – Thin Plate Pure Lead. This refers to the fact that these batteries are made of very thin plates, which do not contain any calcium or other typical impurities that deplete battery voltage over time.

UPS – Uninterruptible Power Supply. This is a device that provides emergency battery backup power to electronics when the main electrical power fails.

VRLA Battery – Valve Regulated Lead Acid Battery. These lead acid batteries are designed to include pressure relief valves that allow for nearly 100% recombination of the gasses that would vent in traditional flooded batteries. Because of this very efficient recombination process, there is no need to periodically add water to these batteries.



EnerSys World Headquarters
2366 Bernville Road
Reading, PA 19605, USA
Tel: +1-800-964-2837

EnerSys EMEA
EH Europe GmbH
Baarerstrasse 18
6300 Zug, Switzerland

EnerSys APAC
No. 85, Tuas Avenue 1
Singapore 639518
Tel: +65 6558 7333

Want more info?
Scan code to access
the ODYSSEY[®] Battery
Literature Library

